

User Quick Guidelines for iRIS4 Addressable Fire Alarm Panel


Zone TEST

NOTE: The Messages for running tests in the system are with the lowest priority and they are not displayed automatically from the panel!

Active Test Indication

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SOUNDERS SILENCED
- DELAY
- DISABLE
- TEST
- POWER ON

Messages for Zones in Test

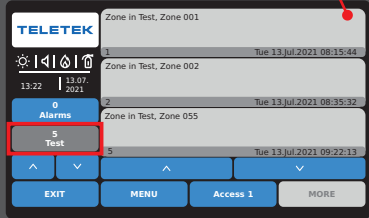

Number of Zone in Test

1	2	4	5	6	7	8	
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

Button sequence for ZONE testing:

1

Code for ACCESS LEVEL 2 or 3

2

3 Select the zones for testing. To test all zone numbers, press the "Select all" button. Press Up/Down buttons to review the rest zone numbers. Press "Test" to start.



4 Go to the zones in test and activate the installed detectors to check the system for proper work and efficiency. 5

Button sequence to exit the ZONE testing:

5

DISABLE Introducing

NOTE: The DISABLE Messages for events are with high priority but they are not displayed automatically from the panel!

Indication for DISABLEMENT

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SOUNDERS SILENCED
- DELAY
- DISABLE
- TEST
- POWER ON

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

Button sequence for DISABLE introducing:

1

Code for ACCESS LEVEL 2 or 3

Button sequence for ZONE DISABLE:

2

Select the zone for disabling.

3 The zone is disabled.

Button sequence for OUTPUTS DISABLE:

2

Choose an output to disable: Sounder; Fire Brigade; Fire Protection; Fault Output; Relay 1-4.

3 The output is disabled.

You can disable several outputs at the same time.

Button sequence for LOOP DEVICES DISABLE:

2 Select the address of the device.

3 The loop device is disabled

Enabling of ZONES, OUTPUTS and LOOP DEVICES:

1 2 3 The Zone/Output/ Loop Device is enabled.