

User Quick Guidelines for iRIS4 Addressable Fire Alarm Panel

FIRE Event in the System

FIRE ALARM Indication

Activated Sounders

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SOUNDERS SILENCED
- DELAY
- DISABLE
- TEST
- POWER ON

FIRE ALARM Message

FIRE alarm in the zones

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

1 FIRE ALARM EVENT, time delay set for Sounder, Fire and Fire Protection outputs Turn off the buzzer:

In case of Operation in Network, turn off the buzzer as choose:

Select Panel Number 1-64, press an active button for a single panel in the Network,

or

Select ALL available panels in the Network,

or

Select only THIS concrete panel.

Go to the zone with fire alarm event and check for a real presence of FIRE, then follow **Step 2 - Start Evacuation, and/or Step 3 - Stop Sounders, according the situation.**

2 REAL FIRE ALARM, time delay set for Sounder, Fire and Fire Protection outputs Start Evacuation:

In case of Operation in Network, start Evacuation as choose:

Select Panel Number 1-64, press an active button for a single panel in the Network,

or

Select ALL available panels in the Network,

or

Select only THIS concrete panel.

3 Turn off sounders and Reset:

In case of Operation in Network, choose the panels, where to perform Turn off Sounders.

The panel is reset to Normal operation mode. Press **Access 2** , then **LOG OUT** .