

Supported SMS Commands

SMS from User	Model TTE GPRS		Description
	Simple	Standard	
<i>"Reset" or "Restart"</i>	✓	✓	A command for resetting (restarting) the operation of the module.
<i>"Rssi"</i>	✓	✓	A command for checking the signal strength of the available GSM network.
<i>"Output X on"</i>	-	✓	A command for switching ON a PGM Number.
<i>"Output X off"</i>	-	✓	A command for switching OFF a PGM Number.

"X" is a number of PGM Output from 1 to 6.

Supported SMS Messages for Operation

SMS Returned from module	Model TTE GPRS		Description
	Simple	Standard	
<i>"Module will restart after 10 seconds"</i>	✓	✓	A confirmation message for received command "Reset" or "Restart".
<i>"Power UP"</i>	✓	✓	A message for power up of the module; confirmation that the reset of the module is complete.
<i>"Current Rssi: -XX dBm"</i>	✓	✓	A message with the current measured value for signal strength: - From -111 dBm to -91 dBm: Poor signal - From -90 dBm to -70 dBm: Good signal - From -69 dBm to -51 dBm: Very good signal
<i>"Output X is On"</i>	-	✓	A confirmation message that the PGM output has been switched ON.
<i>"Output X is Off"</i>	-	✓	A confirmation message that the PGM output has been switched OFF.
<i>"Error: Invalid syntax"</i>	-	✓	The sent command is not typed correctly or there is used a special symbol or letter in the text.
<i>"Error: Invalid Output Number - X"</i>	-	✓	The entered Output number is wrong, not existing. The PGM output numbers must be from 1 to 6.
<i>"Error: PGM Number X is Input"</i>	-	✓	The current setting of the entered PGM number is for Input.
<i>"Error: PGM Number X is Not Allowed"</i>	-	✓	Currently the operation via SMS commands with the respective PGM number is disabled.

"X" is a number of PGM Output from 1 to 6.

Voice Management Mode – Operation Algorithm
(For Modes: Voice Guide, with micro SD card)

