

ИЗНЕСЕН ПОЖАРЕН ИНДИКАТОР FRL-1

ПРИЛОЖЕНИЕ

Изнесеният пожарен индикатор се свързва към изхода на автоматичен пожарен детектор за повтаряне на алармения сигнал за пожар.

Максимален ток в активно състояние - 30mA.

Към пожарен индикатор FRL-1 могат да се свържат максимум 3 автоматични пожароизвестителни детектори от серия SensoMAG.


ИНСТАЛИРАНЕ

Пожарният индикатор се използва в скрити и открити кабелни инсталации. За монтиране на основата първо се отстранява капака, чрез натискане на заключващия палец.


СВЪРЗВАНЕ

Пожарният индикатор е снабден със светодиод за индикация на пожароопасна ситуация на охранявания обект. Кабелът на пожарния детектор се свързва към входа на пожарния индикатор, съгласно указаната на платката полярност.

На Фигура 1 е показано свързване на един детектор към пожарен индикатор FRL-1, а на Фигура 2 - свързване на няколко детектора (максимум 3).

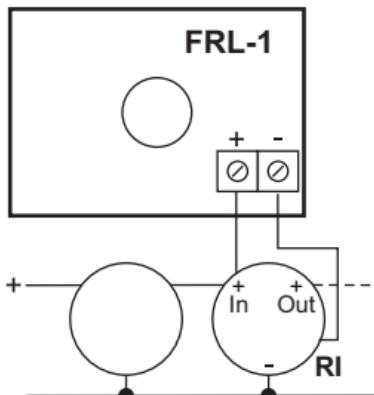

Фигура 1
Свързване на 1 автоматичен
детектор към FRL-1.

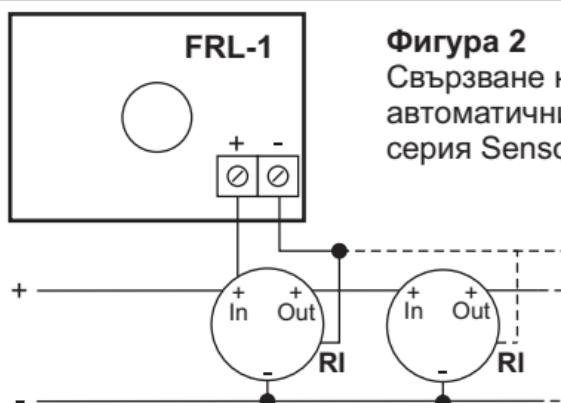

Фигура 2
Свързване на 2 (до 3)
автоматични детектора от
серия SensoMAG към FRL-1.

FIRE REMOTE LED INDICATOR FRL-1

APPLICATION

The Fire Remote LED Indicator FRL-1 application is duplicating the light signaling of the activated automatic fire detector.

Maximum current consumption in activated state - 30mA.

Maximum 3 automatic SensoMAG fire detectors could be connected to the Fire Remote LED Indicator input.

INSTALLATION

The Fire Remote LED Indicator FRL-1 is used for flush and surface mounting installations. To mount the FRL-1 base, first you have to remove the plastic cover by pressing of the locking pin.

CONNECTING

The Fire Remote LED Indicator FRL-1 is equipped with a red LED for indicating of fire alarm situation in the premises. Connect the fire detector cable to the FRL-1 input, as observe the polarity shown on the PCB.

On Figure 1 is shown connecting of one fire detector to Fire Remote LED indicator FRL-1, and on Figure 2 - connecting of several detectors (maximum 3).

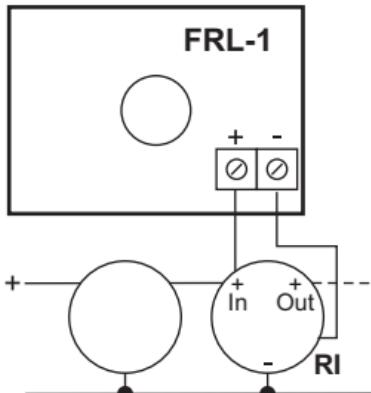


Figure 1
Connecting of 1 fire detector to FRL-1.

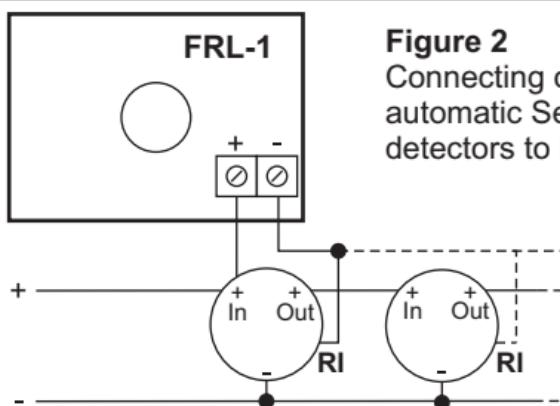


Figure 2
Connecting of 2 (up to 3)
automatic SensoMAG fire
detectors to FRL-1.